



Printer Printing Blank Pages?



Quick Troubleshooting Checklist

Section 1: Basic Checks

- Printer is powered on properly
- Paper is loaded correctly
- Correct printer selected in print dialog
- No error lights on the printer

Section 2: Ink / Toner Check

- Ink cartridges installed correctly
 - Protective tape removed from cartridge
 - Ink level is sufficient
 - Cartridge not dried or expired
-

Section 3: Printhead / Nozzle Check

- Run printer **nozzle check test**
 - Run **printhead cleaning cycle** (1–2 times only)
 - Wait 10 minutes between cleaning cycles
-

Section 4: InkTank Printer Checks

- Ink above minimum level
 - No air bubbles in the ink tube
 - Ink valves open
 - Initial ink charging completed
-

Section 5: Software & Settings

- Printer driver updated
 - Correct paper size selected
 - Draft mode disabled
 - Printer spooler restarted
-

Section 6: When to Replace or Upgrade

- Printhead permanently clogged
 - Printer beyond monthly duty cycle
 - Repeated blank pages after cleaning
-

Footer

Need detailed step-by-step fixes?

Read the full guide:

[**How to Fix Printer Printing Blank Pages?**](#)

What knowledge are you going to consume in our detailed guide? Here's a short glimpse: